Commissioning and Operation

Unpacking and setting up the printer 2
Unpacking 2
Install the label tray 3
Assembling the TT4 magazine 3
Transporting 4
Connecting the printer 5
Layout of the device connections 5
Mains cable connection 6
Connecting the data cable 7
Connecting printer options 8
Slide-in card modules 9
General information about plug-in cards 9
Layout of the slots 9
Printer type and memory capacity 9
Operating panel of the printer 10
Layout of the operating elements 10
Display 10
Meanings of the buttons 10
Operating modes 11
Off-line mode 11
On-line mode 11
Report status 11
Basic operating procedures 12
Restarting the printer 12
Restarting the printer (reset) 12
Calling up the programme version 12
Operation in off-line mode 13
Off-line mode (TTX) 13
Off-line mode (TDI) 14
Operation in on-line mode 15
Error messages 16
Index 17

Unpacking and setting up the printer

Unpacking

1. Open the box and remove the parts lying on top, the extra parts and the foam covering (1).
2. Take hold of the device from the bottom and lift it out the box. Get somebody to hold the box when removing the device.

The device is lying on its side in the box. Pay attention to the following notes:

- Do not use the cover (2), which is accessible from above, to lift the device. The cover moves and is not suitable for picking up the device.
- Devices with a cutter:
  Do not grasp the cutter (3). Use the cutter motor (4) as a handle to lift the device out of the box.
- Do not lift the device using the narrow slit (5) of the card slot at the back of the device.

If the packaging has a material inlet slot (6), you can use it to start lifting up the device. Then take hold of the device from the bottom and lift it out of the box.

- Do not use other protruding components (e. g. the magazine or label tray) to lift or transport the device.

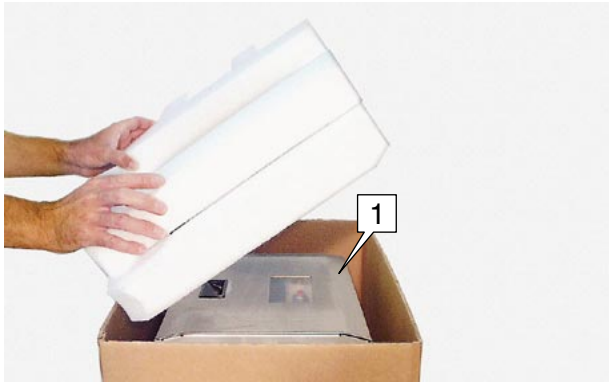

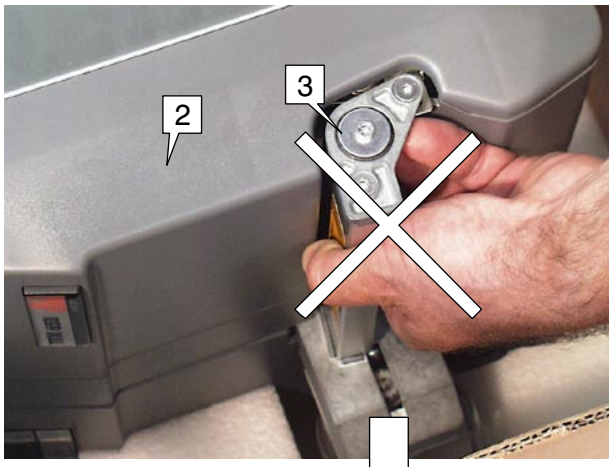

3. Setting down the device (1).
4. Turn the device to the position in which it is to be used (2).
5. Place the device on a firm and level surface (3).

Install the label tray

(only TDI/STDI/XXTREME)

1. Attach the label tray by aligning the two pins with the holes on the left of the device. The label tray is almost flush against the device (an aperture of approx. 1 to 3 mm remains).
2. Attach the label tray at the correct height with the flaps pointing upwards. The narrower the labels, the higher the position of the tray.
3. Insert the bar into the mounting.
4. Push the magazine onto the two rods and secure it with the retaining rings supplied with the device.

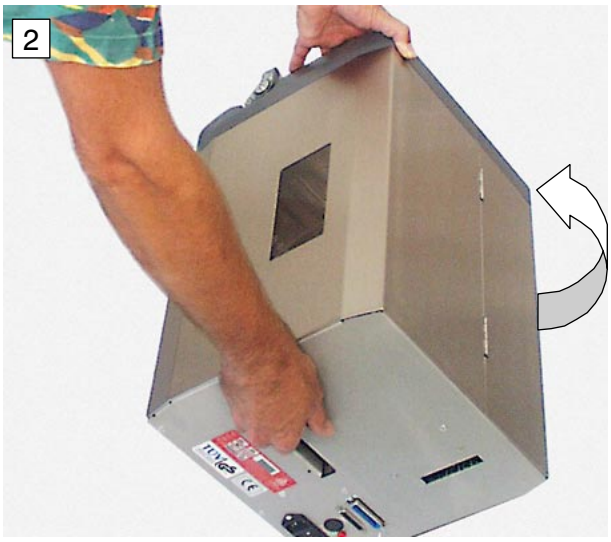

Assembling the TT4 magazine

(only TT4)

❍ The assembly of the TT4 magazine is described in the Manual TT2/4.

➠ The packaging material (4) should be stored for possible shipping.

Pay attention to environmental protection if the packaging is to be disposed of. Check whether it would be possible to return it to your supplier.

❍ More detailed information about environmental protection is contained in the section "Safety Notes".

Transporting

Pay attention to the following instructions when lifting and carrying the device:

➔ Before transporting the device, switch it off, pull out all cables and take off any removable external parts.

➠ Devices with a cutter:
Do not grasp the cutter. Use the cutter motor as a handle for transporting.

➠ Do not lift the device using the narrow slit of the card slot at the back of the device.

➠ Do not use other protruding components (e. g. the magazine or label tray) to lift or transport the device.

➔ Take hold of the device from the bottom and carry it to its new location.

➔ Place the device on a firm and level underlay.

Connecting the printer

Layout of the device connections

Connections TTX (without TTX 350):

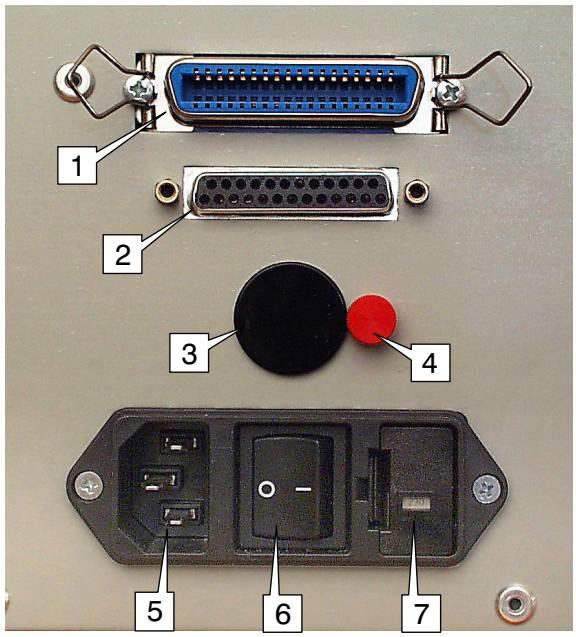

1 Centronics interface (parallel interface)
2 Serial interface RS232/RS485 (serial interface)
3 Optional socket
4 Earthing screw
5 Mains cable connection
6 Mains switch
7 Fuse selector switch

Connections TTX 350:

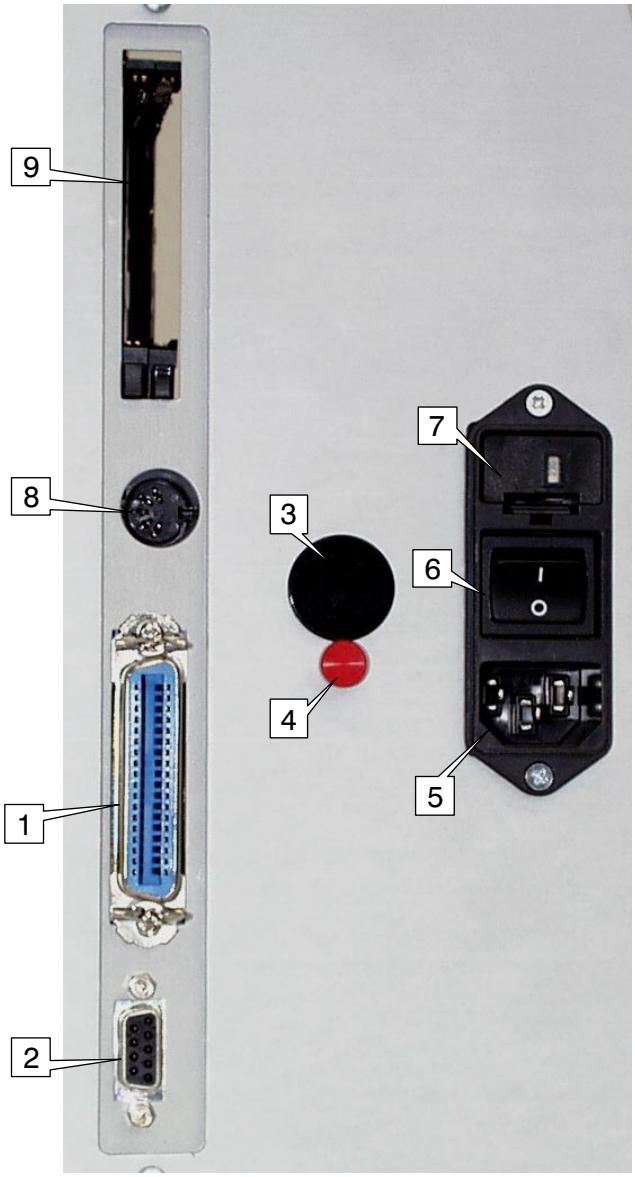

1 Centronics interface (parallel interface)
2 Serial interface RS232/RS485 (serial interface)
3 Optional socket
4 Earthing screw
5 Mains cable connection
6 Mains switch
7 Fuse selector switch
8 Not assigned
9 Plug-in card slot

Connections TDI:

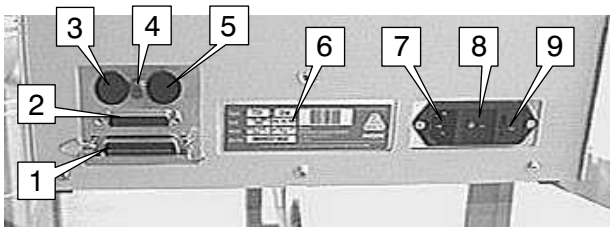

1 Centronics interface (parallel interface)
2 Serial interface RS232/RS485 (serial interface)
3 Optional socket 1
4 Earthing screw
5 Optional socket 2
6 Type label
7 Mains cable connection
8 Mains switch
9 Voltage selector switch

Mains cable connection

Before connecting the device to the mains, it is necessary to check the mains voltage setting. Dangerous contact voltage can arise if the device is connected to the mains power supply when setting the mains voltage on the device fuse.

Therefore, pay attention to the following:

– *Never alter the voltage settings or change the fuse when the device is connected to the mains power supply!*

1. Check whether the device voltage (4) corresponds to the local mains voltage rating.

   Normally the device is already set to the mains voltage supply of the destination country before it leaves the factory.

2. In order to set the mains voltage rating, remove the insert (3), insert a suitable fuse, turn the insert and replace it.

3. Ensure that the mains switch (2) is switched off, attach the mains cable to the connector (1), and plug the mains plug into the main power supply socket.

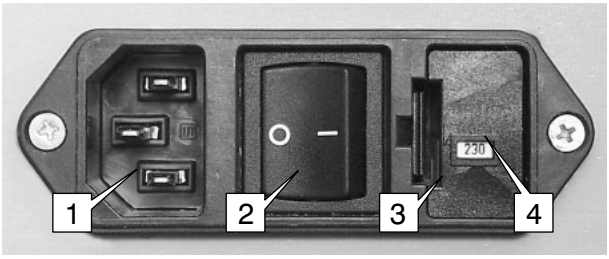

Connecting the data cable

Switch off the device before plugging in or removing the data cable, the mains power supply connector cable or the optional connector cable!
It is only permitted to connect devices to the interfaces or the sockets which have been tested according to IEC 950 or VDE 0805, and which comply with these requirements in line with SELV.

Pay attention to these instructions to avoid damage to the device.

Standard

A serial interface V.24/DB25 (RS232) and parallel interface (Centronics) are integrated as standard interfaces for connecting the printer. The parallel interface is the default printer setting. The serial interface can be activated in the parameter menu of the printer.

❍ You can find a summary of all the parameters and settings in the chapter "Info print-outs and parameters".

RS422

As an option, the manufacturer can replace the RS232-interface with an RS422/RS485-interface. The RS232-interface is then no longer available!

❍ Information about upgrading from RS232 to RS422/RS485 can be found in the Service chapter of the Service Manual, section "Connections and electrics".

Only TTX 350

The serial interface of the TTX 350 can be operated either as an RS232 or RS485 interface. This is switched over by changing the jumper on the mainboard.

❍ Information about setting the jumper can be found in the Service chapter of the Service Manual, section "Connections and electrics".

Connecting the printer to the PC:

➔ Connect the data cable to the serial interface of the PC and – depending on the data transmission to be used – to the serial or parallel connector socket of the printer.

Setting the printer to serial data transmission:

1. Connect and switch on the printer:
   Display OFF
2. Press FEED+CUT button:
   Display INFO
3. Press CUT button repeatedly until
   Display IFAC
4. Press ENTER button;
   Display PORT

❍ Continued on the next page.

5. Press ENTER button:
   Display CENT
6. Press CUT button,
   Display RS23
7. Press ENTER button:
   Display PORT
8. Press FEED+CUT button:
   Display IFAC
9. Press FEED+CUT button:
   Display OFF

Connecting printer options

Optional socket

Printer options can be connected to one (TTX) or two (TDI) sockets on the back of the device – e.g. a single-start switch or a power stacker for the TDI.

Plug-in card modules

General information about plug-in cards

The plug-in modules are intended for the use of optional cards. PCMCIA cards with up to 2 MB per card can be inserted. More detailed information is contained in the card manual.

➠ Only plug-in cards which have been approved by the manufacturer may be used. Do not insert, remove or change a card until at least 60 seconds after switching off the device!

Layout of the slots

Slide-in modules TTX/TDI

0 Slot 0

1 Slot 1

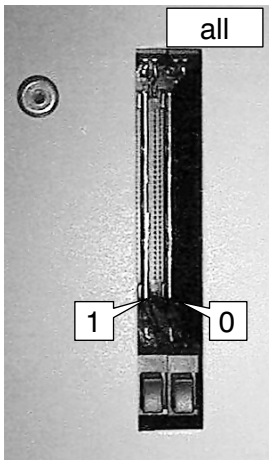

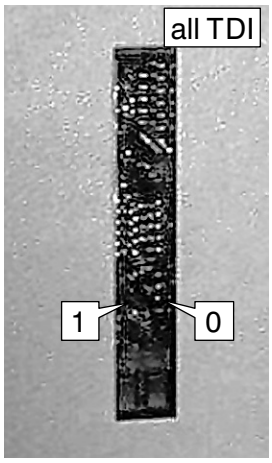

Printer type and memory capacity

TTX 350, TTX 450, TTX 650, TTX 950, TTX 1050	PCMCIA	2	2 MB	–	✓	✓
S45/65/95/105	PCMCIA	2	2 MB	–	✓	✓
Ocelot/Puma/Lion/Tiger/ TigerXXL	PCMCIA	2	2 MB	–	✓	✓
TDI/STDI/XXTREME	PCMCIA	2	2 MB	–	✓	✓

❍ Refer to the card manual for more information about the card; refer to the Easy Plug Manual for more information about programming.

Operating panel of the printer

Layout of the operating elements

Operating elements:

1 Display
2 FEED button
3 CUT button
4 ON/OFF button (=ENTER button)

Display

4-figure display

The 4-figure display shows the operating modes: parameters, values, status and malfunctions. The display is largely self-explanatory despite the limited number of positions.

Meanings of the buttons

General

The small number of buttons still permit a multitude of operating functions. The device is operated using a logical menu structure. The buttons have different meanings depending on the operating mode and menu item. In addition, special functions are programmed by pressing several buttons simultaneously.

Despite this variety, the following main functions can be assigned:

ON/OFF button

ONLINE/OFFLINE =on-line/off-line:
Alternates between on-line and off-line mode

ENTER button

ENTER =Enter:
Confirms values, menu items or displays

CUT button

CUT =Cut.
Also leads to deeper levels of the menu structure or selects menu items. Values are reduced.

FEED button

FEED =material feed, in on-line-mode start after stop.
Also leads to deeper levels of the menu structure or selects menu items. Values are increased.

FEED+CUT

FEED+CUT (pressed simultaneously) =ESC (Escape),
i.e. return to the main menu option. Also leads in off-line mode to the parameter menu.

❍ Other and more detailed function assignments can be found

- in the following sections (functions in off-line and on-line mode) and
- in the section "Info print-outs and parameters" (how to use the parameter menu).

Operating modes

Off-line mode

Display OFF Off-line mode is for parameter settings, status reports and printer settings. The printer is not ready to receive data via the selected interface (off-line). Print jobs are not carried out.

ON/OFF button Press the ON/OFF button in order to go into on-line mode.

On-line mode

Display ON The on-line mode is usually activated after the printer has been switched on (adjustable). The printer is ready for operation in the on-line mode. Data can be received via the selected interface (on-line). Print jobs are carried out. If Stop or Error are displayed, the printer goes automatically into off-line mode.

ON/OFF button Press the ON/OFF button in order to go into on-line mode.

Report status

Status report A malfunction or certain conditions are signalised by the printer with a status report. In this report status, the printer waits for the error to be corrected and/or an acknowledgement. After acknowledgement, the printer goes from the report status into off-line mode (depending on the error and how the previous process has been completed).

ENTER, FEED Acknowledge with the ENTER button and switch off the acoustical signal with the FEED button in order to exit the report status (change to off-line).

Basic operating procedures

Restarting the printer

Connection

1. Connect the printer to the mains power supply (if not already done so) and plug in the interface cable (if required).

Display: **none**

Switching on

2. Switch on the printer using the mains switch.

Display: **INIT**, **ON** (normal) or **OFF** (if so set)

Offline

3. If display OFF: Go to on-line mode by pressing the ON/OFF button.

Display: **ON**

On-line

The printer is now ready to receive data via the selected interface.

Restarting the printer (reset)

Display: **Arbitrary (not off!)**

Reset

➔ Press the FEED+CUT+ON/OFF buttons (all 3 buttons simultaneously) in order to reset the printer. The printer is restarted (restart or also warm-up).

Display: **INIT** (blinking), **ON**

The printer can therefore be restarted without having to switch the device off first.

➔ During reset, all the data stored in the printer is deleted!

Calling up the programme version

Version display

The programme version (e. g. 1H34) is shown during the rest of the reset procedure.

Reset

➔ Press the FEED+CUT+ON/OFF buttons (all 3 buttons simultaneously) and keep them pressed in order to see the version number! The printer is reset and restarted.

Display: **1Hxx**, **INIT** (blinking), **ON**

➔ During reset, all the data stored in the printer is deleted!

Operation in off-line mode

Off-line mode (TTX)

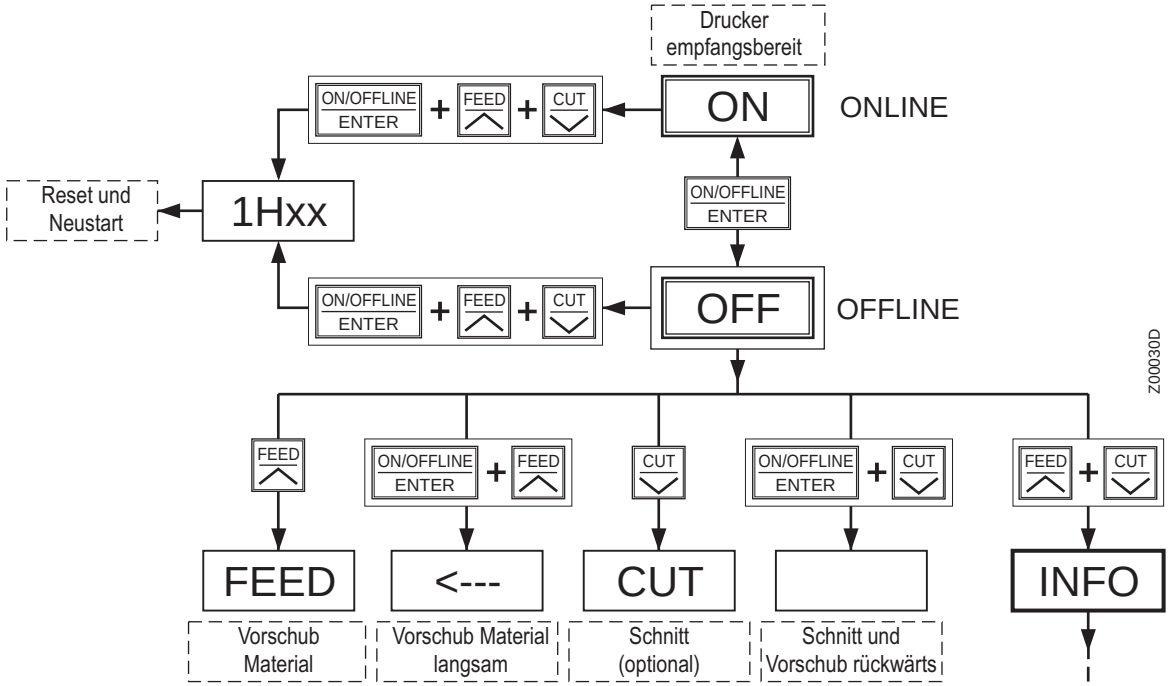

Previous display	Button combinations	Display afterwards	Function/meaning
OFF	ON/OFF	ON	On-line mode, printer is ready to receive
OFF	ON/OFF+FEED	<---	Slow material and ribbon feed
OFF	ON/OFF+CUT		Cut, then reverse feed (doesn´t work with TTX 350/Ocelot!)
OFF	FEED	FEED	Material feed
OFF	CUT	CUT	Cut TTX 350/Ocelot: Labels between printhead and cutter are ejected and cut. (only if Cutter or TCS is installed and activated)
OFF	FEED+CUT	INFO	Selection parameter menu
OFF	FEED+CUT+ON/OFF	INIT, OFF	Reset by pressing the version display buttons

Off-line mode (TDI)

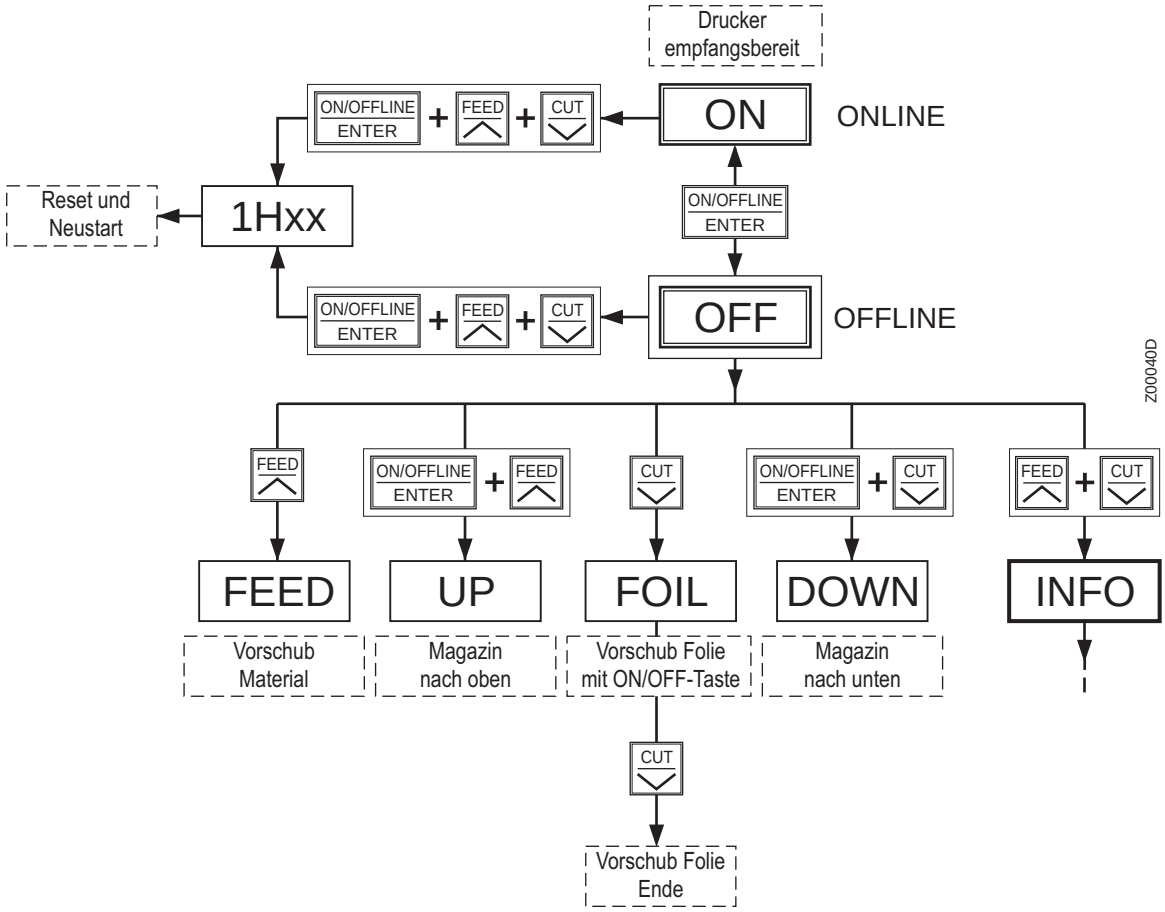

Previous display	Button combinations	Display afterwards	Function/meaning
OFF	ON/OFF	ON	On-line mode, printer is ready to receive
OFF	ON/OFF+FEED	UP	Magazine pointing up, if parameter MMOD =TAG
OFF	ON/OFF+CUT	DOWN	Magazine pointing down, if parameter MMOD =TAG
OFF	FEED	FEED	Material feed
OFF	CUT	FOIL	Slow ribbon feed when pressing ON/OFF button
OFF	FEED+CUT	INFO	Selection parameter menu
OFF	FEED+CUT+ON/OFF	INIT, OFF	Reset by pressing the version display buttons

Operation in on-line mode

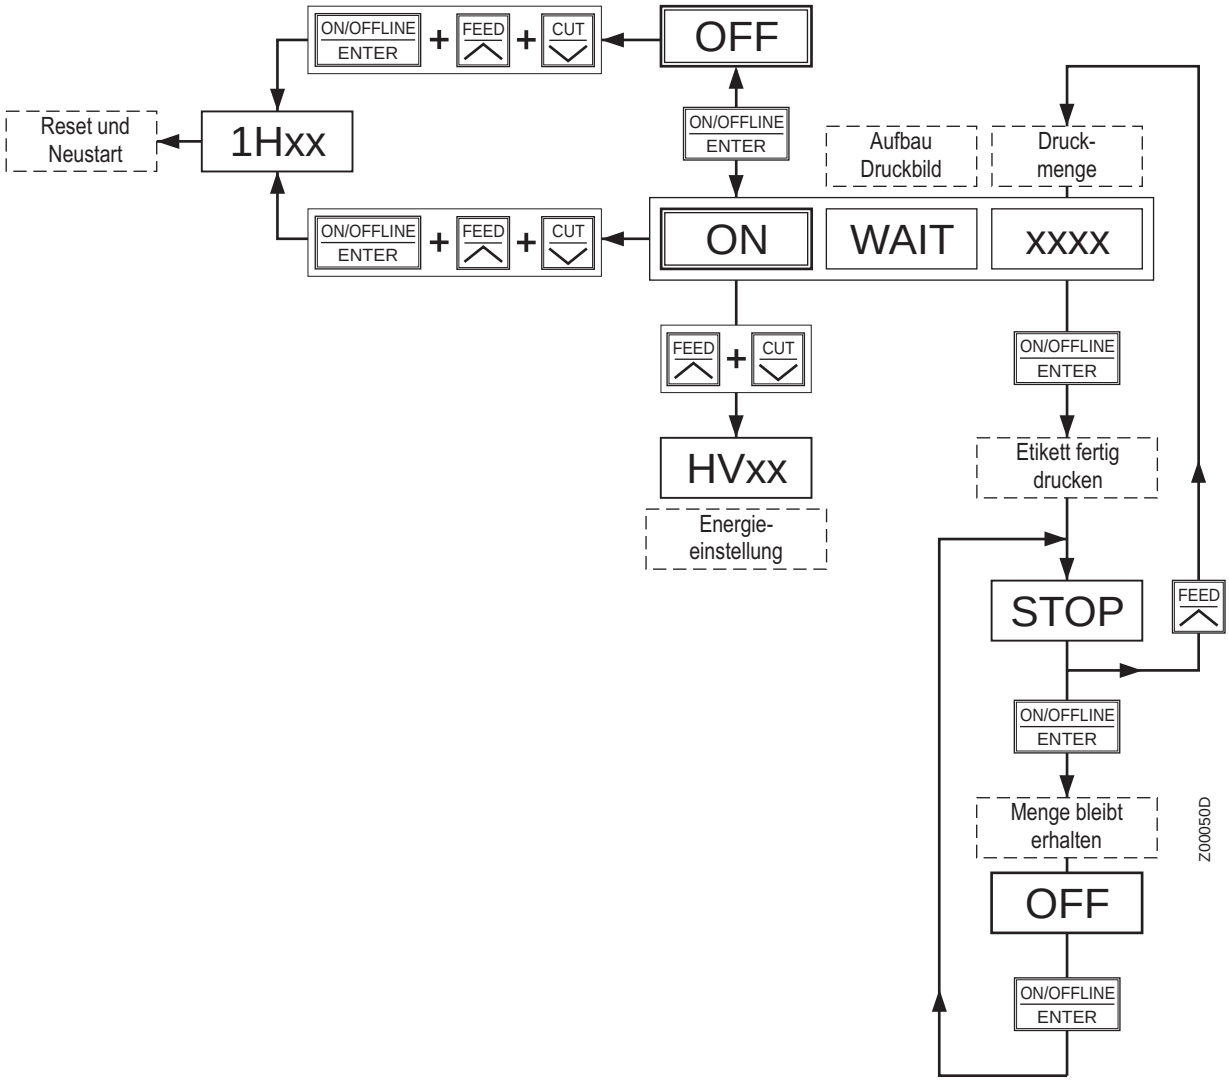

Previous display	Button combination	Display afterwards	Function/meaning
ON	FEED+CUT	HVxx	Print head power setting: increase value with FEED button, decrease value with CUT button
WAIT	not possible	WAIT	Creation of print image
xxxx			Display of labels to be printed, including those being printed
xxxx	ON/OFF	STOP	The label currently being printed in printing is completed, the display then starts to blink
STOP xxxx	ON/OFF	OFF	Change into off-line mode (quantity remains the same)
OFF	ON/OFF	STOP xxxx	On-line mode with halted print job
STOP xxxx	FEED	xxxx	Restart print job

Error messages

Previous display	Button combinations	Display afterwards	Function/meaning
	ON/OFF		Status report STxx (xx = error number). Confirm that the error has been corrected (acknowledgement)
STxx	FEED		Switch off acoustical signal.
	CUT		To exit the report status. Depending on the error, either change into off-line mode or the previous operation is continued
STxx	(self-acknowledging)	xxxx	Status report as a warning, self-acknowledging. The message appears for approx. 2 seconds on the display. The printer then continues with its previous job

Index

B
Buttons, meanings 10
C
Centronics interface....5
Changing the fuse....6
Check mains voltage setting....6
Connecting printer options....8
Connecting the data cable....7
Connections TDI 6
Connections TTX 5
Connections TTX 350 5
Connector cable, optional....7
Contact voltage....6
D
Device connections....5
Display 10
E
Earthing screw....5
Error messages....16
F
Fuse selector switch 5
I
Install the label tray....3
Interface cable 7
Interfaces 7
L
Label tray 3
LCLR 9
M
magazine....3
Mains cable connection....5, 6
Mains switch 5
Memory capacity....9
MMOD 14
O
Off-line mode 11
Off-line mode, operation TDI....14
Off-line mode, operation TTX....13
On-line mode 11
On-line mode, operation....15
Operating elements, layout 10
Operating modes 11
Operating panel....10
Operating procedures....12
Optional socket....5, 6
P
Packaging material....3
Plug-in card....9
Plug-in cards....9
Programme version, display....12
R
Report status 11
Reset....12
Restart 12
Retaining ring....3
RS232-interface....7
S
Serial interface....5
Serial interface, replacing....7
Setting mains voltage 6
Setting serial data transmission 7
Setting up, printer 2
Slide-in card module....9
Slots, layout 9
T
TT4 magazine, assembling 3
Type label 6
U
Unpacking, printer 2